


FRANKLIN PRECAST

20 Park Drive, Franklin, NJ 07416

973-827-7563

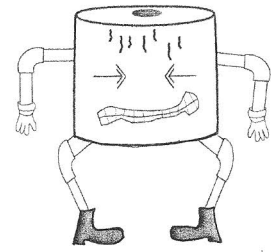

Franklin Precast Septic / Pump Tank

Onsite Vacuum Testing Procedure

The following is the procedure which must be followed in order to insure your new septic tank will pass the water tightness testing required by NJDEP. Failure to follow the guidelines set forth in this procedure will void the water tight guarantee.

1. Follow guidelines for tank installation
2. **DO NOT BACKFILL TANK** until testing is complete.
3. **DO NOT** connect inlet pipe from house or outlet pipe to disposal system.
4. **DO** install inspection ports where required to required height.
5. **DO** install risers to required height.
6. Tank must be **VACUUM TESTED**. Water testing by filling tank with water is not an accepted method by Franklin Precast. If you choose to water test, you will void the guarantee.
7. Schedule vacuum testing with Franklin Precast or qualified testing company of your choice. If you choose another company other than Franklin Precast, please let us know so we can discuss procedures with them.
8. If proper procedures are followed, your new Franklin Precast septic or pump tank will give you many years of water tight service

If you have any questions about these or any other Franklin Precast procedures, please call 973-827-7563.